

SHARP®

EL-6050

ELECTRONIC ORGANIZER

OPERATION MANUAL

NOTICE

SHARP strongly recommends that separate permanent written records be kept of all important data. Data may be lost or altered in virtually any electric memory product under certain circumstances. Therefore, SHARP assumes no responsibility for data lost or otherwise rendered unusable whether as a result of improper use, repairs, defects, battery replacement, use after the specified battery life has expired, or any other cause. SHARP assumes no responsibility, directly or indirectly, for financial losses or claims from third persons resulting from the use of this product and any of its functions, the loss of or alternation of stored data, etc. The information provided in this manual is subject to change without notice.

 
CAUTIONS

- Do not carry the Organizer in the back pocket of slacks or trousers.
- Do not drop the Organizer or apply excessive force to it.
- Do not subject the Organizer to extreme temperatures.
- Clean only with a soft, dry cloth.
- Use only a SHARP approved service facility.

Contents

Part Names	E2
Display Symbols	E3
Using the Organizer for the First Time	E3
When Abnormal Conditions Cause a Malfunction ...	E4
Entering Characters	E5
Making Corrections	E5
Telephone Mode	E6
1. Storing Telephone Listings	E6
2. Recalling Telephone Listings	E8
3. Editing Telephone Listings	E10
4. Deleting Telephone Listings	E11
Calculator Mode	E13
Currency/Unit Conversion	E15
Memory Storage	E19
Secret Function	E20
1. Password Registration	E20
2. Turning the Secret Function On and Off ...	E21
3. Designating Listings as Secret	E22
4. Changing Secret Listings to Non-Secret	E23
5. Changing the Password	E24
6. Deleting the Password and Secret Listings	E24
Replacing Batteries	E25
1. Precautions	E25
2. Battery Replacement	E26
Specifications	E27

Part Names

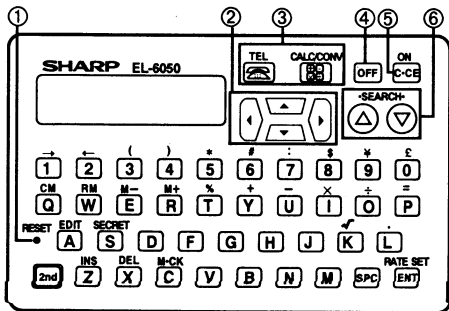

- ① RESET switch
- ② Cursor movement keys
- ③ MODE keys
- ④ Power OFF key
- ⑤ Power ON/Clear/Clear entry key
- ⑥ SEARCH keys

The following notations are used for key operations.






$\begin{matrix} \text{CM} \\ \boxed{\text{Q}} \end{matrix} \begin{matrix} \rightarrow \\ \rightarrow \end{matrix} \begin{matrix} \boxed{\text{CM}} \\ \text{q} \end{matrix} : \begin{matrix} \text{Clear memory} \\ \text{Letter "Q"} \end{matrix}$

$\begin{matrix} \rightarrow \\ \boxed{1} \end{matrix} \begin{matrix} \rightarrow \\ \rightarrow \end{matrix} \begin{matrix} \text{2nd} \\ 1 \end{matrix} \begin{matrix} \boxed{\rightarrow} \\ \end{matrix} : \begin{matrix} \text{Symbol "}\rightarrow\text{"} \\ \text{Number "1"} \end{matrix}$

The blue colored keys are operated by pressing **2nd** and appropriate key.

Display Symbols

 : Secret listings can be accessed.

 : More information exists in the direction indicated by the symbol. (Press , , , or  to display the information).

*****: Indicates that the recalled listing is secret.

2nd: Indicates that **2nd** has been pressed.

- In this manual, only the symbols necessary for explanation will be shown.

Using the Organizer for the First Time

Be sure to perform the following operations before using the Organizer for the first time.

 
1. Press the RESET switch twice.

- Press the RESET switch with a ball-point pen or similar object.

Do not use an object with a breakable or sharp tip.

2. Press **2nd** **ENT**.

- The Telephone mode entry prompt will appear to allow you to enter a telephone listing.

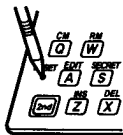

TEL1:NAME?

When Abnormal Conditions Cause a Malfunction

If the Organizer is subjected to strong, extraneous electrical noises or shocks during use, an abnormal condition may occur in which no keys (including **ON** **C-CE**) will respond. If this happens, press the RESET switch on the left side.

If an error occurs internally, "DATA PROBLEM" and "PRESS RESET!" are displayed alternately. Clear all memories by performing the above steps.

Entering Characters

1. Entering Numbers and Letters

Press the desired number or letter key.





2. Entering Symbols

A total of 10 symbols, →, ←, (,), *, #, :, \$, ¥ and £, can be entered. To enter the symbol, press **2nd** and then the desired symbol key.

Making Corrections

Move the cursor to the number or letter to be corrected. Enter the correct number or letter to replace the previous one.

Cursor

The cursor (_ or ■) indicates the position for entry of a character or a number. Move the cursor with    or .

• Inserting characters

Each time **2nd** **INS** are pressed, a space is inserted at the cursor position to allow you to enter a character.

• Deleting characters

Press **2nd** **DEL** to delete the character at the cursor position.

Telephone Mode

The telephone listing is composed of two files, TEL1 and TEL2. Press **TEL** to select the Telephone mode. Pressing **TEL** switches between TEL1 and TEL2 alternately.

A maximum of 36 characters can be entered in the name field and a maximum of 60 characters can be entered in the number field. Additionally, characters, "F" and "C" representing: Fax and Cellular, respectively, can also be entered.

1. Storing Telephone Listings

Example:

Enter the following example into TEL1.

SMITH ROBERT, 012-345-6789, F 345-6790

1. Press **TEL** to display the Telephone mode (TEL1) screen.

TEL1:NAME?

2. Enter the name.

SMITH **SPC** ROBERT

-MITH ROBERT_

3. Press **[ENT]** to allow you to enter a phone number.

NUMBER?

4. Enter the phone number.

012 **[=]** 345 **[=]** 6789

012-345-6789*

- Use **[U]** to enter "-".

5. Enter the fax number.

F **[SPC]** **[SPC]** **[SPC]** 345 **[=]** 6790.

F 345-6790*

- If the number of digits for a phone number is less than 12, insert additional spaces up to a total of 12 digits to make the telephone listing more easily read.

6. Press **[ENT]**.

The name and number will be displayed briefly, then the next entry prompt will be displayed. The telephone listing is now stored.

- If the memory is full, "FULL! NOT IN" will be displayed and the telephone listing cannot be stored. If this happens, press **[C-CE]** to clear the error message.

- When entering a symbol, such as "(" or "#", press **2nd** and the desired symbol key.
- When arrow symbols, **→**, **←**, **↓**, and **↑**, are displayed, the hidden information can be displayed. Press **◀**, **▶**, **▲**, or **▼** to display the information.
- To enter a telephone listing for the next person, continue to enter the name and phone number in the same manner. If the other data is displayed, press **C-CE** to return to the Telephone mode entry prompt and enter the name and phone number.
- To skip entry of a phone number, press **ENT** while "NUMBER?" is displayed. However, entry of a person's name cannot be skipped.

2. Recalling Telephone Listings

Select TEL1 or TEL2 and recall telephone listings. There are three ways to recall telephone listings, (1) Sequential search, (2) Direct search, and (3) Keyword search. Regardless of the entry order, telephone listings are stored by the first character of the person's names in the following order.

Space → Symbols (\$, ¥, £, →, ←, (,), #, *, -,) → Numbers (0 to 9) → Colon (:) → Letters (A to Z)

(1) Sequential search

Press ∇ or \triangle on the Telephone mode screen to recall the telephone listing in order. Keep the key pressed to display the telephone listings at high speed.

∇ : Recalls the telephone listing in forward order.

\triangle : Recalls the telephone listing in reverse order.

- When the symbols, \rightarrow , \leftarrow , \downarrow , and \uparrow , are displayed, more information exists. Pressing \rightarrow or \leftarrow scrolls the name by 12 characters and pressing \uparrow or \downarrow scrolls the phone number one line.
- If there is no more telephone listing to be recalled (end of the telephone listing is reached), the display returns to the Telephone mode screen.

(2) Direct search

1. Enter the initial character of the person's name.
2. Press ∇ (\triangle) to recall the desired telephone listing.
 - If there is no telephone listing beginning the entered character, "■NOT FOUND!■" will be displayed briefly and the display returns to the Telephone mode screen.
 - Subsequently, press ∇ or \triangle to perform a direct search.

(3) Keyword search

To recall the telephone listing containing the entered character(s) (word), press **C-CE**, enter the character(s), and press **2nd** ∇ (\triangle).

Example:

Recall the telephone listing containing the word "ROB" in the TEL1 mode.

1. Press **TEL** several times to select the TEL1 mode.
2. Enter "ROB".

C-CE ROB

ROB_

3. Press **2nd** **▽** to recall the telephone listing.

SMITH ROBERT
012-345-6789.

- Each time **2nd** **▽** are pressed, successive telephone listings containing the word "ROB" are displayed.
- If there is no telephone listing containing the entered word, "■NOT FOUND!■" will be displayed briefly and the display returns to the Telephone mode screen.

3. Editing Telephone Listings

1. Recall the telephone listing to be edited.
2. Press **2nd** **EDIT** to enter the Edit mode and the cursor will flash.
3. Move the cursor to the character to be edited with **▶**, **◀**, **▼**, or **▲** and enter the correct character.

- Press **[2nd] [INS]** to insert a space at the cursor position to allow you to enter a character. Press **[2nd] [DEL]** to delete the character at the cursor position.
4. Press **[ENT]** to finish editing.
 - Pressing **[2nd] [ENT]** creates a new listing without erasing the old listing.

4. Deleting Telephone Listings

1. Recall the telephone listing to be deleted.
2. Press **[2nd] [DEL]**. "DELETE OK?" will appear.
3. Press **[ENT]** to delete the currently displayed telephone listing.

To keep the telephone listing, press **[C-CE]**.

Deleting all the telephone listings in the TEL1 or TEL2 file

1. Press **[2nd] [DEL]** on the Telephone mode screen (TEL1 or TEL2).
"TEL1 DELETE?" or "TEL2 DELETE?" will appear.
2. Press **[2nd] [ENT]** to delete all the telephone listings in the selected file simultaneously.
To keep the telephone listings in the file, press **[C-CE]**.

Deleting all the telephone listings in the Telephone mode

Press **2nd** **DEL** in step 3, registered record display of the checked memory storage procedure (on page E19). "RESET OK?" will appear. Subsequently, press **2nd** **ENT** to delete all the telephone listings and the display returns to the Telephone mode screen. To keep the telephone listings, press **C-CE** .

Note:

When deleting all the telephone listings, "SECRET ON!" will appear briefly and the display returns to the Telephone mode screen after **2nd** **DEL** are pressed if the secret function is turned on. In this case, turn off the secret function while referring to page E22 and perform the above procedures again.

Calculator Mode

The Organizer can calculate numbers of up to 12 digits.

Calculation

Press **CALC/CONV** to select the Calculator mode.

Press **CALC/CONV** in the Calculator mode to enter the Currency/Unit conversion mode. Pressing

CALC/CONV switches between the Calculator and Conversion/Unit modes alternately. Before performing a calculation, press **C-CE**, **C-CE** and **CM** to clear the memory and display.

Note:

When **+/-**, **-**, **x**, or **÷** is pressed, the respective symbol, +, -, x, or ÷ is displayed.

When **=** or **%** is pressed, the symbol, **=**, is displayed. (In the examples on the following pages, these symbols are not described in this manual).

Errors

If the calculation result or the integer section in the numerical value in the memory exceeds 12 digits or if a number is divided by zero (0), an error occurs (E is displayed). If an error occurs, press **C-CE** to clear it.

Example	Operation	Display
$(-24+2) \div 4 = -5.5$	$\text{C}\cdot\text{CE} \text{ } \ominus 24 \text{ } \oplus 2 \text{ } \div 4 \text{ } =$	-5.5
$34 + 57 = 91$	$34 \text{ } \oplus 57 \text{ } =$	91.
$45 + 57 = 102$	$45 \text{ } =$	102.
$68 \times 25 = 1700$	$68 \text{ } \times 25 \text{ } =$	1'700.
$68 \times 40 = 2720$	$40 \text{ } =$	2'720.
$200 \times 10\% = 20$	$200 \text{ } \times 10 \text{ } \% \text{ } =$	20.
$9 \div 36 = 25\%$	$9 \text{ } \div 36 \text{ } \% \text{ } =$	25.
$200 + (200 \times 10\%) = 220$	$200 \text{ } \oplus 10 \text{ } \% \text{ } =$	220.
$500 - (500 \times 20\%) = 400$	$500 \text{ } \ominus 20 \text{ } \% \text{ } =$	400.
$4^6 = (4^3)^2 = 4096$	$4 \text{ } \times \text{ } = \text{ } \times \text{ } =$	4'096.
$1/8 = 0.125$	$8 \text{ } \div \text{ } =$	0.125
$25 \times 5 = 125$	$\text{CM} 25 \text{ } \times 5 \text{ } \text{M} \text{ } \oplus$	^M 125.
$-)84 \div 3 = 28$	$84 \text{ } \div 3 \text{ } \text{M} \text{ } \ominus$	^M 28.
$+)68 + 17 = 85$	$68 \text{ } \oplus 17 \text{ } \text{M} \text{ } \oplus$	^M 85.
<u>182</u>	RM	^M 182.
$\sqrt{25-9} = 4$	$25 \text{ } \ominus 9 \text{ } = \sqrt{\text{ }}$	4.
123456789098×145	$123456789098 \text{ } \times$	
$= 17901234419210$	$145 \text{ } = \text{ } \text{E}$	17.9012344192
	$\text{C}\cdot\text{CE}$	17.9012344192
$(17.9012344192 \times 10^{12} = 17901234419200)$		

Currency/Unit Conversion

Currency conversion, such as from \$ to £ and from ¥ to \$ can be performed. Unit conversions, such as from centimeters to inches, are also possible. The following currencies and units in the Organizer are present at the factory.

Press **CALC/CONV** twice to select Currency/Unit conversion mode. Press **CALC/CONV** again to select the Calculator mode.

No.	Currency/Unit		Conversion Rate
	A	B	
1	\$	¥	0
2	\$	£	0
3	\$	DM	0
4	inch	cm	2.54
5	oz	g	28.35
6	°F	°C	5/9 (F-32)

- The rate in the above table shows the value of B when A equals 1. Conversion from B to A (for example, from ¥ to \$) is also possible.
- Currencies No. 1 to No. 3 can be changed. Set the correct rate before using the conversion function.

- Units and rates for items No. 4 to No. 6 cannot be changed.

Setting a Rate

Example:

Set the rate so that one dollar equals 103 yen.

1. Press **CALC/CONV** to select the Currency/Unit conversion mode.

[1] \$ → ¥
0.

2. Select the currency or unit for which the rate is to be set.

- Press ∇ (\triangle) to select the currency or unit for which the rate is to be set. (This example uses No. 1. Therefore, this selection is not needed).


3. Enter the rate.


103 **2nd** **RATE SET**

[1] \$ → ¥
103.

- "SETTING RATE" will appear briefly and the rate is now registered. The rate is retained until the new rate is entered.
- The rate can be entered in up to 12 digits.


 

Converting Currency/Unit


To convert unit A to unit B, press .


To convert unit B to unit A, press .

Example:

Convert \$119.8 to yen.




1. Press  () to select the unit. (In this example, select No. 1).
2. Enter the value to be converted.
3. Press  to convert it.


[1] \$  ¥ 12339.4

The symbol, "→", is changed to "" and the conversion result is displayed.

Example:

Convert 25°C to °F.

1. Press  () to select the unit. (In this example, select No. 6. For No. 6, the rate is not displayed).
2. Enter the value to be converted.
25
3. Press  to convert it.

[6] °F  °C 77.
--

- The conversion result may have a slight calculation error as a result of rounding off the number. Use the conversion result for reference.

Changing the Unit Name

Only items No. 1 to No. 3 can be changed.

1. **Select the currency or unit to be changed and press **2nd** **EDIT**.**

The cursor will flash.

2. **Enter the new name to replace the previous one.**

Up to four characters can be entered in A and B. After the new unit name is entered in A, press **▶** to move the cursor to B and enter the new unit name in B. To set the rate subsequently, press **▼** and enter the new rate.

3. **After the new names and rate have been entered, press **ENT**.**

Memory Storage

Checking Memory Storage

1. Press **TEL** to check memory storage.
2. Press **2nd** **M-CK**.

USED	REMAIN
447	416

The number of bytes in use and remaining are displayed.

3. Press **M-CK**.

TEL1	TEL2
17	11

The numbers of registered records in TEL1 and TEL2 are displayed.

4. Press **C-CE** or **TEL** to return to the Telephone mode screen.

The Organizer can store up to 863 bytes in memory (excluding the calculator mode memory).

One byte is required per character in the name entries, and one byte is required for two digits in the telephone number entry. When there is an odd number of digits in a number entry, the last digit occupies one byte. In addition two bytes are needed to divide each telephone listing.

Secret Function

1. Password Registration

Up to seven characters can be registered as the password. Spaces are valid only if they are followed by other characters.

If the password is forgotten, it will be necessary to clear the password and all secret listings from memory (see page E24). As a safeguard, make a written record of the password.

Example:

Register the password "1234567".

1. Press **TEL** to select the Telephone mode.

- Select either TEL1 or TEL2. One password is valid for both TEL1 and TEL2.

2. Press **2nd SECRET**.

SET PASSWORD

3. Enter the password.

1234567

1234567

4. Press **ENT**.

- "☞" is displayed and the password is now registered. The display returns to the entry prompt.
- If "PASSWORD?" is displayed, a password is already registered. To change or delete the password, see page E24.

2. Turning the Secret Function On and Off

When the Secret function is off, "☞" is displayed (secret listings can be accessed).

When the Secret function is on, "☞" is cleared even after the password is registered (secret listings cannot be accessed).

(1) Turning the Secret function on

1. Press **2nd** **SECRET** when the Telephone (TEL1 or TEL2) mode entry prompt appears.

The password will be displayed.

2. Press **ENT**.

The secret function is now on. "☞" is cleared and the display returns to the entry prompt.

- Even if the power is turned off, the Secret function is always on.

(2) Turning the Secret function off

1. Press **2nd** **SECRET** when the Telephone (TEL1 or TEL2) mode entry prompt appears.
2. Enter the password and press **ENT**.
(Press "1234567" in this case).

The Secret function is now off. "☐" is displayed and the display returns to the entry prompt.

- When searching for the telephone listing while the Secret function is off, the secret listing is searched first, and then non-secret listing is searched.
- When a telephone listing is entered while the Secret function is off ("☐" on the display), it is registered as the secret listing.

3. Designating Listings as Secret

"*" next to a listing indicates it is secret.

Secret listings will not be recalled unless the Secret function is off.

(1) Storing listings as secret

Turn off the Secret function, then enter the listing.


All the listings entered while secret function is off are designated as secret listings.

(2) Designating stored listings as secret

Example:

Designate the listing for SMITH ROBERT as secret.

 
1. Recall the listing.



SMITH ROBERT
012-345-6789

2. Press **2nd** **EDIT** .
The cursor will flash.

3. Press **2nd** **SECRET** .



flashes
SMITH ROBERT
012-345-6789

"*" is displayed.

4. Press **ENT** .

The listing for SMITH ROBERT is now designated as secret.

4. Changing Secret Listings to Non-Secret

1. Turn the Secret function off (see page E22).

2. Recall the desired secret listing.

3. Press **2nd** **EDIT** .

The cursor will flash.

4. Press **2nd** **SECRET** .

"*" disappears.

5. Press **ENT** .

The secret listing is now changed to non-secret.

Note:

To edit the secret listing while keeping it secret, edit the listing after **2nd** **EDIT** are pressed in step 3 and press **ENT** to store the secret listing again.

5. Changing the Password

1. Turn the Secret function off ("■" is displayed).
2. Press **C-CE** **2nd** **SECRET**.
3. Press **2nd** **EDIT**. The initial character of the password will flash.
4. Enter a new password.
5. Press **ENT**.

The new password is now registered.

Note:

If the incorrect password is entered when turning the Secret function off, "■PW. ERROR!■" will appear. In this case, press **C-CE** and enter the correct password.

6. Deleting the Password and Secret Listings

Delete only the secret listings and its password.

1. Press **C-CE** **2nd** **SECRET**.
 2. Press **2nd** **DEL**.
 3. Press **2nd** **ENT**.
- To cancel, press **C-CE**.

Replacing Batteries

Battery used

Type	Model	Quantity
Lithium battery	CR2016	1

- When the battery is replaced, all the memory contents will be cleared.
- Be sure to write down any important information stored in memory before replacing the battery.

1. Precautions

Since improper use of batteries may cause leakage or explosion, strictly observe the following instructions.

- Insert the battery with its positive side (+) correctly positioned, as indicated, in the holder.
- Never throw batteries into a fire because they might explode.
- Keep batteries out of the reach of children.

Because the batteries in the Organizer were installed at the factory, they may become depleted before the specified expiration time is reached.

2. Battery Replacement

(1) Battery replacement time

If the display becomes dim and difficult to read, immediately replace the battery with a new one. Continued use of the Organizer with an exhausted battery can alter or clear the memory contents.

- Make sure the power is turned off before replacing the batteries.
- Do not press **ON** **C-CE** until the battery replacement procedure is completed.

(2) Replacing the battery

1. Press **OFF** to turn the power off.
2. Loosen the screw and remove the battery holder cover on the back of the unit.
3. As illustrated, remove the used battery by prying it out with a ball-point pen.
4. Install a new battery with the (+) side facing up.



5. Replace the holder cover and secure it with the screw.
6. Press **ON** **C-CE** to turn the power on. If nothing appears on the screen, press the RESET switch and press **ON** **C-CE** again.

To minimize battery consumption, the Organizer is designed to automatically turn off when no key has been pressed for approximately seven minutes.

Specifications

Model: EL-6050

Product name: Electronic Organizer

Display: 2 lines of 12 digits

Memory capacity: 863 bytes

Telephone mode:

Name: max. 36 characters

Number: max. 60 digits (12 digits × 5 lines)

Calculator mode:

12 digits (with calculation status symbols)

arithmetic calculations, percentage, square root, memory calculation

Currency/unit conversion:

up to 6 kinds of currencies and units

Power consumption: 0.0002 W

Operating temperature:

0 to 40°C

Power supply:

3V $\overline{\text{---}}$ (DC)

(Lithium battery CR2016; 1)

Auto-power off:

Approx. 7 minutes

Battery life:

Approx. 2000 hours (continuous display)

Weight:

Approx. 50g (0.11lb) (including batteries,
excluding wallet)

Dimensions:

108 mm (W) × 68 mm (D) × 7.6 mm (H)

(4-1/4" (W) × 2-11/16" (D) × 5/16" (H))

(excluding wallet)

Accessories:

1 lithium battery (installed), operation
manual

LIMITED WARRANTY

SHARP ELECTRONICS CORPORATION warrants to the first consumer purchaser that this Sharp brand product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof at no charge to the purchaser for parts or labor for the time period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any product the exterior of which has been damaged or defaced, which has been subjected to misuse, abnormal service or handling or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth below and provide proof of purchase to the servicer.

The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on behalf of Sharp.

The warranties described herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the purchaser with respect to the Product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Sharp be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized servicer. Nor shall Sharp be liable, or in any way responsible, for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

THE WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

<u>Your Product:</u>	Electronic Calculator
<u>Warranty Period for this Product:</u>	One (1) year parts and labor from date of purchase.
<u>Additional items excluded from warranty coverage:</u>	Any consumable items such as paper, maintenance cartridge, ink cartridges supplied with the Product or to any equipment or any hardware, software, firmware, fluorescent lamp, power cords, covers, rubber parts, or peripherals other than the Product.
<u>Where to obtain service:</u>	At a Sharp Authorized Servicer located in the United States. To find out the location of the nearest Sharp Authorized Servicer, call Sharp toll free at 800-BE-SHARP.
<u>What to do to obtain service:</u>	Ship (prepaid) or carry in your Product to a Sharp Authorized Servicer. Be sure to have proof of purchase available. If you ship or mail the Product, be sure it is packaged carefully.

TO OBTAIN SUPPLY, ACCESSORY OR PRODUCT INFORMATION, CALL
1-800-BE-SHARP

SHARP
SHARP CORPORATION

96DUP (Z0131T)①
PRINTED IN CHINA /
IMPRIMÉ EN CHINE / IMPRESO EN CHINA
OLG42195201011