OPERATION MANUAL

NOTICE

- SHARP strongly recommends that separate permanent written records be kept of all important data. Data may be lost or altered in virtually any electronic memory product under certain circumstances. Therefore. SHARP assumes no responsibility for data lost or otherwise rendered unusable whether as a result of improper use, repairs, defects, battery replacement, use after the specified battery life has expired, or any other cause.
- SHARP assumes no responsibility, directly or indirectly, for financial losses or claims from third persons resulting from the use of this product and any of its functions, such as stolen credit card numbers, loss or alteration of stored
- The information provided in this manual is subject to change without notice.

In Europe:

This equipment complies with the requirements of Directive 89/336/EEC as amended by 93/68/

Dieses Gerät entspricht den Anforderungen der EG-Richtlinie 89/336/EWG mit Änderung 93/68/ FWG

Ce matériel répond aux exigences contenues dans la directive 89/336/CEE modifiée par la

Dit apparaat voldoet aan de eisen van de richtlijn 89/336/EEG, gewijzigd door 93/68/EEG.

Dette udstyr overholder kravene i direktiv nr. 89/336/EEC med tillægnr. 93/68/EEC

Quest' apparecchio è conforme ai requisiti della direttiva 89/336/EEC come emendata dalla direttiva 93/68/EEC.

Η εγκατάσταση αυτή ανταποκρίνεται στις απαιτήσεις των οδηγιών της Ευρωπαϊκής Ενωσης 89/336/ΕΟΚ, όπως ο κανονισμός αυτός συμπληρώθηκε από την οδηγία 93/68/ΕΟΚ.

Este equipamento obedece às exigências da directiva 89/336/CEE na sua versão corrigida pela directiva 93/68/CEE. Este aparato satisface las exigencias de la

Directiva 89/336/CEE modificada por medio de


Denna utrustning uppfyller kraven enligt riktlinjen 89/336/EEC så som kompletteras av 93/68/EEC.

Dette produktet oppfyller betingelsene i direktivet 89/336/EEC i endringen 93/68/EEC. Tämä laite täyttää direktiivin 89/336/EEC vaatimukset, jota on muutettu direktiivillä 93/


Note

· This model may not be available in some countries.

Part Names

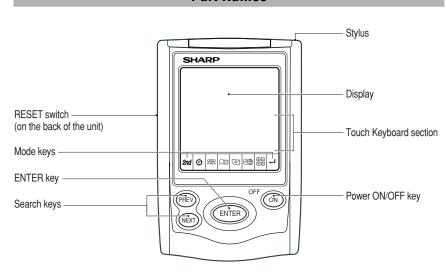

Key Assignments

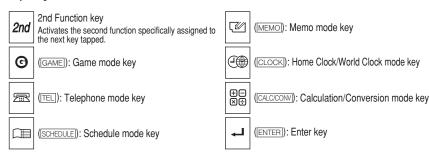

In this manual, these Mode keys are represented with icons in parentheses.

Using the Organizer for the First Time

Be sure to perform the following operations before using the Organizer for the first time.

- 1. Pull out to remove the isolating film on the back of the unit.
- 2. Press the RESET switch with a stylus. "RESET?" is displayed.
- Tap 2nd and press ENTER to initialize the Organizer. Moments later, "RESET!" will be displayed, and the Organizer's memory contents will be cleared.

Soon after, the Select Language screen appears. Guidance messages can be displayed in 10 languages: English, Italian, German, French, Spanish, Portuguese, Hungarian, Czech, Polish, and Greek. When the Organizer is initialized, the setting will revert to English as default. Select the desired language using PREV or NEXT, then press ENTER. When the language is set, the Home Clock will be displayed on the screen. (See "Clock Mode".)

NOTES

- If the Organizer is subjected to strong, extraneous electrical noises or shocks during use, an abnormal condition may occur in which no keys (including ON) will respond. Press the RESET switch, tap 2nd, then press ENTER to delete all the memory contents. · To minimize battery consumption, the Organizer
- is designed to turn its power off automatically when no key activities are detected for approximately 7 minutes.
- The key touch tone can be turned on and off by tapping CLOCK MENU, select "KEY TONE?" using PREV or NEXT, and press ENTER. Select on/off using PREV or NEXT, then press ENTER. When the tone is activated, "✓" will appear.

Entering Characters

Touch Keyboard Alphabet entry mode

Alphabet entry mode	Number entry mode
Q W E R T Y U I O P A S D F G H J K L EDIT → ► Z X C V B N M INS → ▼ SIGL SPACE ONS @ - ? DEL	
Fach time 2nd is tanned	the touch keyboard

- switches between the Alphabet entry mode and the Number entry mode. To tap the touch keys, use the attached stylus.
- Tap towards the center of each key. · Numbers, alphanumeric letters, symbols, and
- "+ × ÷ ." can be entered into the dot display area (the 1st
- Numbers and some characters (only space, -,
- F, and P in Telephone mode) can be entered into the number display area (the 2nd and the 3rd lines)
- · Letters are entered in capital letters ("CAPS" is turned on). To enter lowercase letters, tap CAPS to turn "CAPS" off.

Entering symbols and letters with an accent

To enter a symbol, tap SMBL repeatedly until the desired symbol appears:

@#\$£¥€()~':/_&<>β!?i¿æμ¢

· To enter a letter with an accent mark, tap the relevant key shown below repeatedly after tapping SMBL.

(Key) (CAPS ON)	(CAPS OFF)	(Key) (C	CAPS ON)	(CAPS OFF)
EÉÈËÊĚĘ	éèëêěę			þ
RŘ	ř	SŚ	Ś	ŚŠ
Ζźźż	źžż	DĎ		ď'
Ϋ́Ϋ́	ýÿ	CĆĆ		ćčç
U ÚÙÜÛŰ	úùüûűű	NŃŇ	ŃÑ	ńňñ
	íìïí	ΤŤ		ť
O ÓOÖÕÕØ	óòöôốốø			
LŁĽ	ł			
GΔΦΓΛΠΘ	ΣΥΩΞΨ			
A ÁÀÄÂÃÅÆ	Ą áàäâãååæ	ą		

- Activate "CAPS" on to enter capitalized letters. · In the Greek language mode, only the
- capitalized letters can be entered.

Making corrections Move the cursor to the character to be corrected.

Enter the correct character to replace the previous

The cursor (_) indicates the position for entering a

character. Move the cursor with the cursor keys **Inserting characters**

Each time INS is tapped, a space is inserted at

the cursor position to allow character entry. **Deleting characters**

Tap DEL to delete the character at the cursor

Tap C-CE to clear all the characters you have entered and yet to be stored.

Clock Mode

Home clock 3. Using World clock Daylight saving time 1. Tap CLOCK once or twice to display the World set (with "#") Home city (with "*") Day of the week

Each time CLOCK is tapped, the clock switches

mode. (For World clock, "* " is not displayed.)

· The default setting for the date is "DD/MM/

YYYY" (day-month-year). To change the setting

to "MM/DD/YYYY" (month-day-year) or "YYYY/

2. Tap MENU, select "DATE SET" by using ▲ or

3. Press PREV or NEXT to select the desired

4. Press ENTER to store the new setting.

. To change the 24-hour clock to the 12-hour

time 12/24 is tapped, the clock switches.

clock, tap 12/24 ("A" or "P" is displayed). Each

For daylight saving time/summer time, tap DST

in advance ("#" is displayed on the left side of

1. Tap CLOCK once or twice to display the Home

The cursor starts to flash on the city name.

time zone. (Refer to the list of cities described

• Enter the city name, if needed (6 characters

5. Enter the day, the month, and the year (4 digits).

1st. 1901. to December 31st. 2098

7. Press ENTER. The clock starts from "00"

• To enter a single-digit date or time, enter "0"

· If you enter an invalid date or time, "ERROR!"

appears briefly. Enter the correct date and time

No.

10 11 MOW

13 14 LON

15 -2H

16 17 RI0

18 NYC

19

20

21 LAX

22 23 ANC

Zone Display

CAI

PAR

AZ0

CCS

CHI DEN

HNL

City

AZORES ISLANDS

2hrs behind LON

RIO DE JANEIRO

MOSCOW

CAIRO

PARIS

LONDON

CARACAS NEW YORK

CHICAGO

DENVER

LOS ANGELES

ANCHORAGE

HONOLULU

· The built-in calendar extends from January

Tap AM/PM to select "A" (morning) or "P"

(afternoon) for the 12-hour clock. (in 12-

or under). Only one changed name for Home

3. Press PREV or NEXT to select the desired

1. Tap CLOCK once or twice to display the

between the Home clock and the World clock

1. Before setting the clock

MM/DD" (year-month-day):

Home clock (with "*").

, and press ENTER.

type.

the day of the week).

2. Setting the clock

clock (with "*").

2. Tap 2nd EDIT to start setting.

clock can be stored.

hour)

seconds.

Zone Display

WLG

ADL

TY0

HKG

BKK

RGN

DEL

KHI

DXB

No.

0 TNG

2

3 SYD

4 5 6

7 7.3 DAC

8.3 9 KBL

Notes

4. Tap ▼ to move the cursor to the day.

6. Enter the time (hours and minutes)

and the digit (e.g. "02").

City

WELLINGTON

NOUMEA

SYDNEY

T0KY0

ADELAIDE

HONG KONG

BANGKOK

YANGON

NEW DELHI

KARACHI

KABUL

DUBAI

TEHRAN

DHAKA

TONGA

and press ENTER

Date Time 2. Press PREV or NEXT to select the desired city.

clock (without "*").

4. Changing the cities between Home and World clocks

You can change the home city for a city in another time zone without adjusting the stored correct

- 1. Tap $\begin{cal} \begin{cal} \begin{ca$ clock (without "*").
- 2. Press PREV or NEXT and select the desired city to be set as the new home city.
- 3. Tap 2nd EDIT to change the cities between Home and World clocks.
- The previous home city is now set as the world city (without "*").
- 4. Tap CLOCK to check the home city.
- The selected city in step 2 is set as the home city (with "*").
- 5. Tap CLOCK to recheck the world city, and press PREV or NEXT to select the new world city, if needed.

5. Setting daylight saving time (DST: summer time)

- 1. Tap CLOCK once or twice to display the Home or the World clock.
- 2. Tap DST "#" is displayed. The time is set 1 hour ahead.

To clear DST, tap DST to clear "#". The time is set 1 hour behind.

· DST can be set independently in either Home or

- World clock. When DST is set for one world city, it is used
- for all cities displayed in World clock.

6. Setting alarms

The Organizer has 3 types of alarms:

1. Daily alarm beeps every day at the alarm time (for 1 minute), when "**(‰)**" is turned on.

2. Hourly alarm ... beeps every hour when minutes reach "00", when " Д" is turned on.

3. Schedule alarm .. beeps at the time for all the schedule entries (for 1 minute), when "■»)" is turned on. (Refer to "Schedule Mode".)

Tap any key to stop the alarm beeping.

Setting/Changing the daily alarm time

- 1. Tap CLOCK once or twice to display Home clock (with "*").
- 2. Tap 4 to display the daily alarm screen. (The display differs between the 12-hour and 24-hour clock.)

0 - 00

ALARM

- 3. Tap 2nd EDIT.
- 4. Enter the time.
- 5. Press ENTER. · The daily alarm time is set.
- Turning the alarms on and off

An alarm sounds only when the respective symbol (((**)), ₄, or (□)*)) is turned on. Display Home clock (tap CLOCK once or twice) and tap 4 to display the daily alarm screen. Each time you tap 4 while the daily alarm screen is displayed, the combination of symbols

· Alarms sound even when the Organizer is turned off.

Telephone Mode

Telephone mode is composed of two directions of 6. Enter phone storage memory. Tap TEL to toggle between "1" and "2" on the display.

Use these files for convenience, e.g. business and private files.

A telephone entry consists of name, address, E-mail address, web address (URL) and number

Storing telephone entries

- 1. Tap TEL once or twice to display the Telephone mode
- NAME?
- 2. Enter name, e.g. SMITH SPACE ROBERT, and press Enter
- 3. Enter address, e.g. 2nd 18 SPACE 2nd EAST SPACE ROAD, and press ENTER.
- 4. Enter E-mail address, e.g. **SROB** SMBL

harpsec.com_

(to enter "@")

- SHARPSEC.COM, and press ENTER]. The E-mail address is automatically entered in lowercase letters.
- To enter "@", simply tap @ instead of
- 5. Enter web address (URL), e.g.
- WWW.SHARP USA.COM, and press ENTER.

number, and fax number if needed, e.g. 012-3456-7890 ▼ 2nd

NUMBER?

and press ENTER "STORED!" appears briefly, then the Telephone mode screen is displayed. The telephone entry is now stored.

F SPACE | SPACE | 2nd 3456-7891,

Field	Number of characters	Allowable characters
The 1st line: Name, address, E-mail address and web address (URL)	36 characters or under	Alphabetic letters, numbers, symbols, "+ - × ÷ .", space
The 2nd and the 3rd lines: Phone number		Numbers, space, –, F (Fax), P (Pager)

The symbol "NAME", "ADDRESS", "E-mail", or "URL" is turned on while entering in each field.

To skip entry of an address, E-mail address, web address (URL), or number, press **ENTER** when "ADDRESS?", "E-MAIL?", "URL?", or "NUMBER?" is displayed. However, entry must be made at the "NAME?" field.

Schedule Mode

Schedule mode is used for storing schedule details (36 characters or under), date and time (year, month, day, hour, and minute) In the 1st line the same characters are allowable as in Telephone mode.

1. Storing schedule entries 1. Tap SCHEDULE to

display the Schedule mode screen.

SCHEDULE?

- 2. Enter the details and press ENTER.
- 3. Enter the date and time. The types of date and time are the same as
 - the types set for the clock. • To enter a single-digit date or time, enter "0"
 - and the digit (e.g. "02").
- 4. Press **ENTER** to store in the memory. · Schedules for the following dates can be stored:
- January 1901 to December 2098. If an attempt is made to store an entry without a date or time, or with an invalid date or time, "ERROR!" appears briefly. Enter the correct

2. Alarm for Schedule mode When the schedule alarm ("国》") is turned on, it

date and time and press ENTER

is set for all the schedule entries. Beeping sounds for 1 minute when the time for a schedule entry is reached. Tap any key to stop the alarm. The schedule alarm cannot be set for an individual

Memo Mode

Notes or other pieces of information that are not appropriate for Telephone or Schedule mode can be entered for convenience. In the 1st line the same characters are allowable

as in Telephone mode. In the 2nd and the 3rd lines you can enter numbers, -, and space. (36 characters or under can be entered in each line.)

2. Enter the memo item and numbers. E.g. UNION SPACE

UNION BANK -0011223 BANK ENTER

01 ▼ 272-0011223

3. Press **ENTER** to store in the memory.

Storing memo entries

1. Tap MEMO to display MEMO? the Memo mode screen

PRINTED IN CHINA/IMPRIMÉ EN CHINE/IMPRESO EN CHINA 03DGK (TINSE0630EHZZ)

Notes for storing and recalling entries

- . When the memory is full, "MEMORY FULL!" appears briefly, and the entry cannot be stored.
- When the symbol "▶" or "◄" appears, more information exists. Tap ▶ or ◀ to switch the display.

Checking details of entries in Telephone mode

- To display each field on the 1st line, follow the symbol " \blacktriangledown " or " \blacktriangle " and tap \blacktriangledown or \blacktriangle . (The symbol above the 1st line shows each field.)
- Tap and hold ▶ to start the auto scroll on the 1st line. Tap ▶ again to stop or restart the scroll. Tap C•CE to quit the auto scroll.

Recalling entries - Telephone, Schedule, Memo -

Tap the desired mode key first. NEXT: Recalls entries in forward order

PREV : Recalls entries in reverse order

Sequential search

Press NEXT or PREV in each mode.

Direct search

· Enter the first characters (8 characters or under) of the person's name, schedule details, or memo item, and press NEXT or PREV. Press NEXT or PREV then, to continue performing a direct search.

Sorting order

Telephone and memo entries are stored by the first character of the person's name or memo item in the following order (case sensitive):

space numbers(0 to 9) A a Á á À à Ä ä Â â Ã ã Åå䯿 AaBbCcĆćČčÇçDdĎďE eÉéÈèËëÊêĚëĘęFfGgHhChchli ÍíÌìJïîîJjĶkLIŁŁĽMmNnŃńÑñŇň OoÓóÒòÖöÔôÕõŐőPpÞþQqRrŘ rSsŚśŠšTtŤťUuÚúÙùÜüÛûŮůŰ :/_& <>!?i¿+-×÷.

- "Ch" and "ch" are available in Czech language mode only.
- Schedule entries are stored by date and time.
- · When there is no (further or relevant) entry to be recalled, "NOT FOUND!" appears briefly, and the display returns to the mode screen.
- · Greek characters are sorted as follows: space numbers(0 to 9) $A\,B\,\beta\,X\,\Delta\,E\,\Phi\,\Gamma\,H\,I\,K\,\Lambda$ ÎîJjkLIŁłĽmnŃńÑnŇňÓóÒòÖöÔ ôÕõŐőpÞþQqRrŘřSsŚśŠštŤťU u Ú ú Ù ù Ü ü Û û Ů ů Ű ű V v W w x Y y Ý ý Ÿ ÿ z Ź ź Ž ż Z ż Ø ø ¢ @ # \$ £ ¥ € () ~ ' : / \̈_

 $& <> !?i \dot{c} + - \times \div$

5. Press ENTER several times (until "STORED!"

Editing

- 1. Recall the entry to be edited.
- 2. Tap EDIT. The cursor starts to flash.
- In Telephone mode press [ENTER] several times to display each field (the address field
- 3. Tap ▶, ◄, ▲, or ▼ to move the cursor to the position to be edited.
- 4. Enter, insert, or delete characters (refer to "Entering Characters").
 - To cancel editing, tap C•CE.

appears briefly) to finish editing and to store the entry

Deletina

Editing or deleting entries – Telephone, Schedule, Memo –

- 1. Recall the entry to be deleted.
- 2. Tap DEL
- . "DELETE?" is displayed.
- To cancel the deletion operation, tap 2nd.

Operation

Display

3. Press **ENTER** to delete the entry.

Calculator Mode

calculate numbers of up to 10 digits. Tap CALC/CONV several times to display the Calculator mode screen $(Calculator \rightarrow Currency conversion \rightarrow Unit)$ conversion \rightarrow Calculator...).

The Organizer can

Calculation Be sure to tap C·CE, C·CE, and CM to clear the display and memory before performing a calculation.

• When \oplus , \bigcirc , \otimes , or \oplus is tapped, the respective symbol, +, -, \times , or \div is displayed. (In the examples in this manual, these symbols are not described.)

If an error occurs

If the calculation result or the integer section in the numerical value in the memory exceeds 10 digits or if a number is divided by zero (0), an error occurs ("ERR" is displayed).

Calculation examples

Example

(-24+2)÷4=-5.5	C-CE ⊕ 24 ⊕ 2 ⊕ 4 ⊜	-5.5
34 <u>+57</u> =91	34 ⊕ 57 ⊜	91.
45 <u>+57</u> =102	45 😑	102.
	(The addend becomes a constant.)	
<u>68×</u> 25=1700	68 ⊗ 25 ⊜	1700.
<u>68×</u> 40=2720	40 😑	2720.
	(The multiplicand becomes a constant.)	
200×10%=20	200 🗵 10 %	20.
9÷36=25%	9 ⊕ 36 %	25.
200+(200×10%)=220	200 🛨 10 %	220.
500-(500×20%)=400	500 😑 20 %	400.
$4^6 = (4^3)^2 = 4096$	4⊗ 😑 😑 ⊗ 😑	4096.
1/8=0.125	8 ⊕ ⊜	0.125
25×5=125	CM 25 ⊗ 5 M+	™ 125.
-) 84÷3=28	84 ⊕ 3 M−	™ 28.
+) 68+17=85	68 ⊕ 17 M+	™ <i>85.</i>
182	RM	™ 182.
$\sqrt{25-9}=4$	25 ⊝ 9 ⊜ √	4.
1234567890×145	1234567890 ⊗ 145 ⊜	ERR
=179012344050	17.90) 123440
	C-CE 17.90	0123440
	(17.90123440×10 ¹⁰ =179012	344000)

Currency/Unit Conversion Mode

1. Setting a currency rate

1. Tap CALC/CONV EURO -→ USD several times to display the currency conversion mode

screen (refer to "Calculator mode"). Example: 1 CAD (Canada dollars) = 0.66 USD (US dollars)

- 2. Press NEXT NEXT NEXT to change the display and tap 2nd EDIT. The initial character of "CAD" starts to flash. • You can change each currency name by
 - entering characters (up to 4 in each) and using ightharpoonup, if needed.
- 3. Press ENTER. "0" starts to flash.

4. Enter the rate (up to 10 digits).

-⇒ USD CAD0.66 0.66

5. Press **ENTER** to store in the memory.

2. Converting currency/unit

the currency conversion. Example: Convert 500 CAD into USD using the rate that you have set.

- 2. Enter the value to be converted.

500

3. Tap 🕨 to convert CAD into USD.

To convert in

-⇒ USD CAD330.

- manner. You cannot change the units or the rates for units. The conversion result may have a slight error
- Use the conversion result for reference.

Game Mode

Each time GAME is tapped, the display switches between "ALPHA ATTACK" and "BLACKJACK".

Tap GAME to play the game "BLACKJACK".

BLACKJACK (Twenty-one) Make your "hand" (the total of the numbers on

the cards) as close to 21, without going over 21.

1. Tap GAME to BLACKJÄCK display the following Game mode screen.



2. Press ENTER to start a game. The left 2 cards are dealt for you. (One card is faced up and the other is faced down.) 3. Agree the left-displayed maximum bet (up to

10) or enter fewer bet. Tapping ▶ also can bet to the maximum. 4. Tap SPACE to Your hand The dealer's hand see your hand.

Each time SPACE is tapped, a new card is dealt. • "J", "Q", and "K"



are counted as 10. "A" can be counted as 1 or 11.

• When the first 2 cards are "A" and a face

card ("J", "Q", or "K"), your hand is "BLACKJACK". The dealer's

5. Press ENTER to Your total st an ha ha res di

op being dealt		total	
nd hold your and. The dealer's and and the	J28 20 20	32K4 19 20	
sults are splayed.	Your bet	Your chips	
When you win, your total flashes and your			

- - bet is doubled. . When you win with "BLACKJACK", your bet is tripled.

You need to set the conversion rate before making

- 1. Display the screen: "CAD \rightarrow USD".

reverse order (e.g. 200 USD into CAD), enter **200** and tap **◄**.

- You can use the unit conversion in the same
- as a result of rounding off the number (e.g. up to 2 decimal places for currency conversions).

screen. · When you have no more chips to bet, the

> game is over. To quit the game, tap C·CE or any mode

6. Press ENTER and display the Game mode

key. Your chips are stored for the next time. To return your chips to 30, tap 2nd DEL and

press **ENTER** on the Game mode screen.

ALPHA ATTACK Type in characters (A to

Z) displayed on the 1st line to clear them. 20 levels of speed are available.

01 Level 1. Tap GAME to display the following Game

ALPHA ÄTTAČŘ

- mode screen. 2. Enter the level
- number (2 digits from 01 to 20). · 01: slow. 20: fast
- 01

EYKW

- 3. Press ENTER to start a game. 4. Tap the same key as the first character at the
- left end of the 1st line. (In this case, tap keys in the order: $E \rightarrow Y \rightarrow K \rightarrow W$.)
- · Pressing the correct key in the correct order deletes the character.
- · When 12 characters are displayed in each
- level, the game continues in the faster level (up to 20). · When no more characters can be displayed,
 - the game is over. The Game mode screen with the level when the game is over is displayed.

1. Checking memory storage

1. Tap TEL, SCHEDULE or MEMO to display "NAME?", "SCHEDULE?", or "MEMO?".

CAPS % **FREE** select "MEMORY 99 CHECK" by using ▲ or **▼** , and press ENTER. The number of remaining bytes is

displayed briefly.

- · The Organizer can store up to 66838 bytes in the memory (excluding the Calculator mode
 - One byte is required per character (in the 1st line) for telephone, schedule, and memo
- One byte is required for 2 digits in the number part (in the 2nd and the 3rd lines) of telephone

and memo entries. (When there is an odd number of digits in a number entry, the last digit occupies 1 byte.)

In addition to the memory size for characters (in the 1st line) and numbers (in the 2nd and the 3rd lines), each entry requires the following

memory size: Telephone entry 6 bytes

Schedule entry 8 bytes (including date and time)

Memo entry

2. Deleting all the memory contents

Perform steps 2 and 3 as described in the section, "Using the Organizer for the First Time". • To cancel the deletion operation, press any key

. 3 bytes

EXCEPT FOR 2nd ENTER in step 3.

Secret Function

Memory Storage

1. Registering a password and storing 2. Turning Secret function on and off secret entries

Up to 6 characters can be registered as the password.


One password is valid for Telephone, Schedule, and Memo modes

If the password is forgotten, you cannot delete the password only. You have to delete all the memory contents. (Perform steps 2 and 3 as described in the section, "Using the Organizer for the First Time".) As a safeguard, make a written record of the password.

Registering a password

1. Tap TEL, SCHEDULE or MEMO to display "NAME?", "SCHEDULE?", or "MEMO?".

2. Tap 2nd ?.

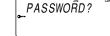

- 3. Enter the password (case sensitive), e.g. ABC.
- 4. Tap **?** to register it.
 - The display returns to the screen in step 1 with the symbol "o---'
 - · If "ERROR!" appears briefly, a password has already been registered. Enter the correct password or delete the password and all the memory contents
- 5. Tap 2nd \P to turn Secret function on. "•••" disappears.

Storing secret entries

- 1. Enter characters in Telephone, Schedule, or Memo mode when "••• " is not displayed (Secret function is on).
- When "•••" is displayed, tap 💡 🗣 to turn Secret function on 2. Tap **?** before pressing **ENTER** to store. "••••"
- appears. 3. Press **ENTER** to store a secret entry in the memory.
- "STORED!" appears briefly, and the display returns to the mode screen without "o-(Secret function is on).

turn Secret function off

You cannot display the secret entry until you

When Secret function is on, "." is not displayed.

- · You can display, edit, or delete entries
- except secret entries. You can enter new entries as secret or

non-secret. When Secret function is off, "." is displayed.

entries only. (You cannot display nonsecret entries.) You cannot enter a new entry.

You can display, edit, or delete secret

Turning Secret function off

secret entries.

- 1. Tap TEL, SCHEDULE or MEMO and check that
- "•••" is not displayed. 2. Tap 2nd \ \ "PASSWORD?" is displayed.
- 3. Enter the password and tap **?**.
 - If you enter an incorrect password, "ERROR!" appears briefly. Follow the above steps and enter the correct password.

• "•--" is displayed and you can display

· Even when Secret function is turned off, it will be automatically turned on (" will disappear): A) when GAME, CLOCK, or CALC/CONV

is tapped. or B) after the power is turned off manually

or automatically. Turning Secret function on

1. Tap $\boxed{\text{TEL}}$, $\boxed{\text{SCHEDULE}}$ or $\boxed{\text{MEMO}}$ and check that '••" is displayed.

The password is displayed. Memorize it again. 3. Tap 🕈 again.

2. Tap 2nd 9.

"•--" disappears and you cannot display secret entries.

3. Changing the password 1. Turn Secret function off ("•• appears). 2. Tap 2nd \(\biggraphi \). The password is displayed.

3. Tap 2nd EDIT. The initial character of the password starts to

4. Enter, or edit characters and make a new password. 5. Tap **?**. The new password is now registered.

Caring for Your Organizer

Replacing Battery

- slacks or trousers.
- Do not drop the Organizer or apply excessive force to it.

Do not subject the Organizer to extreme

· Use only a SHARP approved service facility.

- Do not carry the Organizer in the back pocket of Since this product is not waterproof, do not use
 - it or store it where fluids can splash onto it. · Clean only with a soft, dry cloth.

temperatures.

Battery used		
Туре	Model	Quantity
Lithium hattery	CB2032	1

- · Improper battery replacement may cause change or loss of the memory contents.
- Be sure to write down any important information stored in the memory before replacing the battery.
- Make sure the power is turned off before replacing the battery. Do not press OFF Until the battery replacement

procedure is completed.

1. Precautions Since improper use of the battery may cause leakage or explosion, strictly observe the following instructions.

• Insert the battery with the positive side (+) correctly facing up. Never throw the battery into a fire because it might explode.

· Keep the battery out of the reach of children. Because the battery in the Organizer was installed

at the factory, it may become depleted before the

specified expiration time is reached.

2. Battery replacement

If the display becomes dim and difficult to read, immediately replace the battery with a new one. Continued use of the Organizer with an exhausted battery can alter or clear the memory contents.

- · Complete the replacement of the battery within 1 minute, otherwise all the memory contents may be cleared. 1. Press $\stackrel{\text{OFF}}{|ON|}$ to turn the power off.
- 2. Loosen the screw and remove the battery holder cover on the back of the unit. 3. Remove the exhausted battery by prying it out with a stylus. (Fig. 1)
- 4. Install a new battery with the positive side (+) facing up into the battery holder. (Fig. 2)
- 5. Replace the holder cover and secure it with the
- 6. Press $\stackrel{\text{OFF}}{\text{ON}}$ to turn the power on. • If nothing appears on the display, press the RESET switch and tap NEXT.

Fig. 2

Do not tap 2nd and press ENTER. This key

sequence will clear all the memory contents.

Specifications

- Model: ZQ-P10 Product name: Electronic Organizer Display: 3 lines of 12 digits
- Memory capacity: 96 KB Equivalent* Clock mode: Accuracy: ± 60 seconds/month at 25°C

Display: Year, month, day, day of the week, hour, minute, second, AM/PM Clock function: 12-hour/24-hour format (switchable), 3 kinds of date type (switchable), world clock function, daylight saving time (summer time) display, daily alarm, hourly alarm Telephone mode: Entering and recalling of telephone entry (name, address, E-mail address,

phone number, and web address (URL)) Schedule mode: Entering and recalling of schedule entry (details, year, month, day, hour, and minute), schedule alarm Memo mode: Entering and recalling of memo

Calculator mode: 10 digits (with calculation

status symbols), arithmetic calculations,

percentage, square root, memory calculation, etc. Currency/unit conversion mode: 5 types of currency conversion (editable) and 9 types of unit conversion

· Game mode: 2 games

CR2032 × 1

off 100 times.

Approx. 72 a

Dimensions:

7. Set the clock.

0.003 W Power consumption: Operating temperature: 0°C to 40°C Power supply: 3V ... (DC), lithium battery

Weight (including battery):

operation manual, stylus

Fig. 1

Auto-power off: Approx. 7 minutes Battery life: Approx. 2 years at ambient temperature of 25°C, assuming the following daily use: 30 minutes display, alarm sounding for 20 seconds and key touch tone turned on/

telephone names & numbers (name, telephone and fax number are 14 characters per entry) can be stored by using compression technology. (Compression Rate: Approx. 1.5:1)

64 mm (W) \times 97 mm (D) \times 14.8 mm (H)

Accessories: 1 lithium battery (installed),

Memory at 96KB Equivalent. Approx. 1,500

SHARP CORPORATION

